



Driver's Side

Passenger Side

Polaris XP Pro Wheel Well Block off Installation Instructions

Parts Included:

- (2) 5mm UHMW Block offs
- (7) Push Pins (3 per side required, 1 optional for passenger side if desired for stability)

1. Reach under the XP Pro driver's side back wheel well and place the driver's side block off over the gap, lining up the holes with the factory-drilled holes.
2. Push the pins through the block off into the under carriage. It is easiest to start at the bottom and work to the top.
3. Repeat on the passenger side. Drill out the optional hole to place another pin if desired for stability.



Figure 1: Line up the holes in the block off with the factory-drilled holes

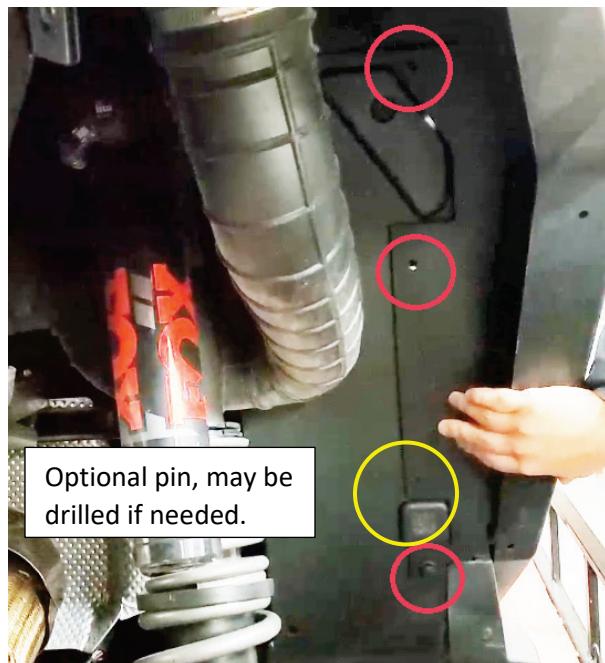


Figure 2: Use 3 pins working from bottom to the top. Drill the 4th hole with a 5/16^{ths} drill bit if desired for stability.