



## Lower Door Valance Installation Instructions


**Parts Included:**

- 2 Polycarbonate Lower Door Valances
- 14 Push Pins (7 per door)

1. Open the door fully and line up the holes of the valance with the factory-drilled holes. It will only fit one way!
2. Push the pins through the valance into the door. It is easiest to start in the middle and work to the ends.



*Figure 1: Line up the holes in the valance with the factory-drilled holes*

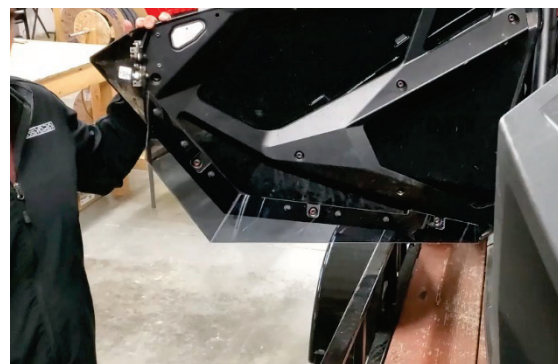

*Figure 2: Use all 7 pins working from the middle, out to the ends*

