

Full Windshield Installation




Parts Included:

- 1 Polycarbonate Windshield
- 1 Rubber Seal

~ install with ~

- 6 - 3/4" Stainless Steel Clamps
- 6 - 1" Stainless Steel Bolts
- 6 - 1" Stainless Steel Nuts
- 6 Stainless Steel Washers

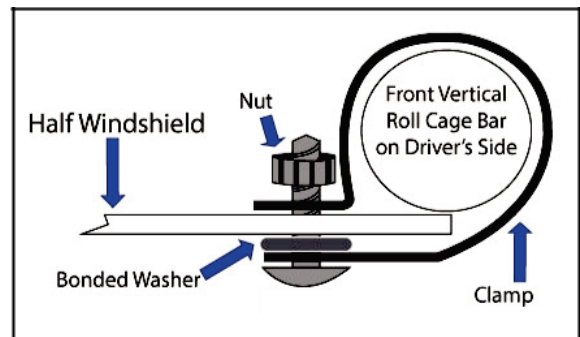

1. Place the windshield in position in the front opening of the roll cage.
2. Install (2 or 3) clamps on each side of the windshield. Place the bolt through the outer tab of the clamp, then through the washer, then the windshield, then the inner tab of the clamp, and then the nut. Do not tighten yet.
3. Make sure that the windshield is against the roll bar on both sides of the vehicle and that the rubber seal is down and tight against the hood of the vehicle. Turn or move the clamps on the roll bar to adjust.
4. Tighten all nuts and bolts.