




## Can Am Maverick R (24'+) Roof Installation Instructions

\*Due to Can Am design requirements, we must supply our roofs with an air scoop to ensure proper airflow. We are not responsible for damage and/or malfunction to your Can Am in any regard.

### Parts Included:

- (1) Tinted Polycarbonate Roof with Roof Scoop & Wind Deflector
- (8) ¼" – 20 x 1 ½" Black Oxide Bolts
- (8) Black Oxide Washers
- (8) ¼"-20 Nylon Hex Nuts
- (4) Big Fender Washers
- (4) 36" Rubber Cushion Strips
- (4) 1 ¾" Stainless Steel Clamps

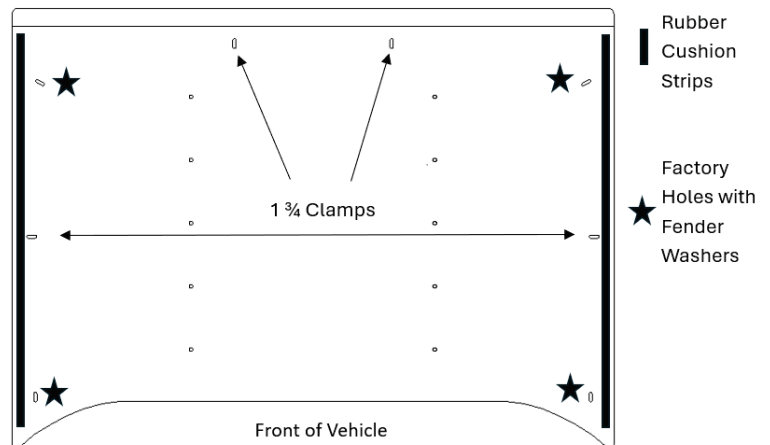

### Installation Instructions:

1. Place 4 Rubber Cushion Strips in positions as indicated on diagram.
2. Position all the clamps supplied into the position according to the diagram.
3. Align the four corners of the roof to the factory holes in the roll cage. When bolting the roof to the factory holes, the fender washers will be used on the underside to allow a secure fit. DO NOT TIGHTEN YET. Start the bolts only.
4. Once the roof is in place with the factory holes, secure the remaining holes with the remaining hardware.
5. After all clamps and factory holes are in place, tighten all bolts to a snug fit. DO NOT OVERTIGHTEN.